



Vehicle Data

Year	18	Make	Toyota	Model	Corolla
BodyStyle	LE 4 DR Sedan	Color		VIN	5YFBURHE4JP852473
Engine	4cyl Gasoline 1.8	Type		Odometer	
Production Date		Primary Point Of Impact	12		
License		Secondary Point Of Impact	14		
License State					



Line Items

Line	Operation	Description	QTY	Labor	Paint	Lbr TTL	Other
1	Remove/Replace	Cover,Front Bumper	7 1	0.8 B			
2	Refinish	Cover,Front Bumper			3.6 R		
3	Remove/Replace	Retainer,Bumper Mldg LT	1				
4	Remove/Replace	Retainer,Bumper Mldg RT	1				
5	Remove/Replace	Retainer,Bumper Mldg	2				
6	Remove/Replace	Retainer,Bumper Mldg	4				
7	Remove/Replace	Reinf,Front Bumper	6 1				
8	Remove/Replace	Ret,Frt Bmpr Cover Lwr	8				
9	Remove/Replace	Supt,Frt Bumper Cover LT	1	0.2 B			
10	Remove/Replace	Supt,Frt Bumper Cover RT	1				
11	Remove/Replace	Grille,Frt Bumper Lwr	1 1				
12	Remove/Replace	Sensor,Temperature	1				
13	Remove/Replace	Brkt,Frt Bumper Sensor	1				
14	Remove/Replace	Shield,Lower Air	1				
15	Remove/Replace	Filler,Front Bumper LT	1				
16	Remove/Replace	Filler,Front Bumper RT	1				
17	Remove/Replace	Retainer,Front Bumper	1				
18	Remove/Replace	Retainer,Front Bumper	1				
19	Remove/Replace	Panel,Frt Bmpr License	1	0.1 B			
20	Remove/Replace	Absorber,Front Bumper	1				
21	Remove/Replace	Brkt,Front Bumper Mtg LT					
22	Refinish	Brkt,Front Bumper Mtg LT					
23	Remove/Replace	Brkt,Front Bumper Mtg RT					
24	Refinish	Brkt,Front Bumper Mtg RT					
25	Remove/Replace	Grille Assembly	5 1	0.2 B			
26	Remove/Replace	Headlamp Assy,Led LT	9 1				
27	Remove/Replace	Headlamp Assy,Led RT	9 1				
28	Additional Labor	Headlamps Aim		0.4 B			
29	Remove/Replace	Lamp Assembly,Driving LT	4 1				
30	Remove/Replace	Lamp Assembly,Driving RT	2 1				
31	Remove/Replace	Panel,Hood	8 1	1 B			
32	Refinish	Panel,Hood			4.7 R		
33	Remove/Replace	Latch,Hood Panel	1				
34	Remove/Replace	Supt,Hood Lock Vert	1				
35	Remove/Replace	Hinge,Hood Panel LT	1	0.5 B			
36	Refinish	Hinge,Hood Panel LT			0.4 R		
37	Remove/Replace	Hinge,Hood Panel RT	1	0.5 B			
38	Refinish	Hinge,Hood Panel RT			0.4 R		
39	Remove/Replace	W/Strip,Hood Panel	1				
40	Remove/Replace	Rod,Hood Hold Open	1				
41	Remove/Replace	Brkt,Hood Hold Open	1				
42	Remove/Replace	Cushion,Hood LT	1				

43	Remove/Replace	Cushion,Hood RT	1
44	Remove/Replace	Label,Hood	1
45	Remove/Replace	Label,Hood	1
46	Remove/Replace	Panel Assembly,Rad Sup	1
47	Refinish	Panel Assembly,Rad Sup	
48	Remove/Replace	Crsmbr,Rad Pnl Lower	
49	Refinish	Crsmbr,Rad Pnl Lower	
50	Remove/Replace	Radiator	1
51	Remove/Replace	Deflector,Radiator LT	1
52	Remove/Replace	Deflector,Radiator RT	1
53	Remove/Replace	Shroud,Radiator	1
54	Remove/Replace	Shroud,Radiator Upper	1
55	Remove/Replace	Brkt,Radiator Mounting LT	1
56	Remove/Replace	Brkt,Radiator Mounting RT	1
57	Remove/Replace	Hose,Radiator Upper	1
58	Remove/Replace	Seal,Radiator LT	1
59	Remove/Replace	Seal,Radiator RT	1
60	Remove/Replace	Seal,Radiator	1
61	Remove/Replace	Airbag Sensor,Front LT	1
62	Remove/Replace	Airbag Sensor,Front RT	1
63	Remove/Replace	Module,Cruise Control	1
64	Remove/Replace	Condenser,A/C	1
65	Remove/Replace	Receiver-Dehydrator	
66	Remove/Replace	Pnl,Inr Fender Front RT	1
67	Refinish	Pnl,Inr Fender Front RT	
68	Remove/Replace	Side Mbr,Front Inner RT	1
69	Refinish	Side Mbr,Front Inner RT	
70	Repair	Fender,Front LT	
71	Refinish	Fender,Front LT	
72	Remove/Replace	Fender,Front RT	1
73	Refinish	Fender,Front RT	
74	Remove/Install	Seal,Front Fender LT	
75	Remove/Install	Seal,Front Fender RT	
76	Remove/Replace	Extn,Front Fender RT	1
77	Refinish	Extn,Front Fender RT	
78	Remove/Install	Skirt,Inner Fender LT	
79	Remove/Replace	Skirt,Inner Fender RT	1
80	Remove/Replace	Horn	1
81	Remove/Replace	Horn	1
82	Remove/Replace	Shield,Engine Lower LT	1
83	Remove/Replace	Shield,Engine Lower RT	1
84	Remove/Replace	Reservoir,W/S Washer	1
85	Remove/Replace	Pump,Washer	1
86	Remove/Replace	Hose,W/S Washer	1

87	Remove/Replace	Neck, Washer Filler	1	
88	Remove/Replace	Module, Airbag Control	1	0
89	Remove/Replace	Airbag, Roof LT	2	1
90	Remove/Replace	Airbag, Roof RT	2	1
91	Remove/Replace	Buckle, Frt Seatbelt LT	1	1
92	Remove/Replace	Buckle, Frt Seatbelt RT	1	1
93	Remove/Replace	Seatbelt, Front LT	1	0
94	Remove/Replace	Seatbelt, Front RT	1	0
95	Blend	Pnl, Front Door Outer RT		
96	Remove/Replace	Pnl, Inner Door Trim RT	1	0
97	Remove/Install	Mldg, Front Door Belt RT		0
98	Remove/Install	Mirror, Outer R/C RT		0
99	Remove/Install	Glass, Front Door T RT		1
100	Remove/Install	Channel, Front Glass Ru RT		0
101	Remove/Install	Handle, Front Door Otr RT		0
102	Remove/Replace	Headliner, Roof	1	6
103	Additional Labor	Cover Car Exterior	1	
104	Additional Labor	Hazardous Waste Removal	1	
105	Sublet	Coolant	1	
106	Sublet	Freon	1	
107	Sublet	Dealer Recharge	1	

