

Year	17	Make	CHEV	Model	Cruze Premier w/1SF Equip Pkg
BodyStyle	4D SED	Color		VIN	1G1BF5SM1H7230002
Engine	4-1.4L Turbocharged	Type	Car	Odometer	40838
Production Date		Primary Point Of Impact19			
License		Secondary Point Of Impact5			
License State					

Line Items

Line	Operation	Description
1		INFORMATION LABELS
2		Rpl information labels
3	Remove/Replace	Emission label gas
4	Remove/Replace	AC label 1st design w/o low gwp
5		FRONT BUMPER & GRILLE
6	Overhaul	O/H bumper assy
7	Remove/Replace	Bumper cover
7	Remove/Replace	Bumper cover
8		Add for Clear Coat
9	Remove/Replace	RT Guide
10	Remove/Replace	LT Guide
11	Remove/Replace	Impact bar
12	Remove/Replace	Absorber
13	Remove/Replace	RT Lamp bezel w/o fog lamps
14	Blend	Tow eye cap
15	Remove/Replace	Air deflector

16	Remove/Replace	Harness sedan
17	Remove/Replace	Air temp sensor
18	Remove/Replace	Upper grille black/chrome
19	Remove/Replace	Center grille black/chrome
20	Remove/Replace	Lower grille
21		AIR CONDITIONER & HEATER
22	Remove/Replace	Condenser
23	Remove/Replace	AC Service evacuate & recharge
24	Remove/Replace	AC Service refrigerant recovery
25	Remove/Replace	O Ring Seal Kit
26	Remove/Replace	Refrigerant Oil (per ounce)
27		HOOD
28	Remove/Replace	Hood
28	Remove/Replace	Hood
29		Overlap Major Non-Adj. Panel
30		Add for Clear Coat
31		Add for Underside(Complete)
32		Add for Clear Coat
33	Remove/Install	Insulator
34	Remove/Replace	RT Hinge
34	Remove/Replace	RT Hinge
35		Add for Clear Coat
36	Remove/Replace	LT Hinge
36	Remove/Replace	LT Hinge
37		Add for Clear Coat
38		FENDER
39	Remove/Replace	RT Fender
39	Remove/Replace	RT Fender
40		Overlap Major Adj. Panel
41		Add for Clear Coat
42		Add for Edging
43		Add for Clear Coat
44	Remove/Replace	LT Fender
44	Remove/Replace	LT Fender
45		Overlap Major Adj. Panel
46		Add for Clear Coat
47		Add for Edging
48		Add for Clear Coat
49	Remove/Replace	RT Fender liner
50	Remove/Replace	LT Fender liner
51		ELECTRICAL
52	Sublet	Pre-Repair Diagnostic Scan, with Printed
53	Sublet	Post-Repair Diagnostic Scan, with Printe
54	Blank	Disconnect and Re-Connect 12V Battery
55		EXHAUST SYSTEM
56	Remove/Install	R&I exhaust assy rrw of preconverter
57		WHEELS
58	Remove/Install	RT/Rear R&I wheel
59	Remove/Replace	LT/Rear Wheel, alloy 17" code RSC
60	Remove/Replace	LT/Rear Tire FIRESTONE Firehawk GTH 225/
61	Sublet	Mount and Balance/Wheel and Tire
62	Remove/Replace	Wheel Weights (per wheel)
63	Sublet	Tire Disposal Fee
64	Blank	PA Tire Tax
65	Blank	Reset Tire Pressure Monitors
66		WINDSHIELD
67	Remove/Replace	Windshield GM, US built w/o humidity sen
68	Blank	Urethane Glass Installation Kit
69	Blank	Adhesive Removal
70	Remove/Install	RT Wiper arm
71	Remove/Install	LT Wiper arm

72	Remove/Install	RT Washer nozzle
73	Remove/Install	LT Washer nozzle
74		COWL
75	Remove/Install	Cowl grille
76		INSTRUMENT PANEL
77	Remove/Install	R&I instrument panel
78		CONSOLE
79	Remove/Install	R&I console assy
80		RESTRAINT SYSTEMS
81	Remove/Replace	Driver air bag atmosphere
82	Remove/Replace	RT Head air bag sedan
83	Remove/Replace	LT Head air bag sedan
84	Remove/Replace	LT Ft seat air bag
85	Remove/Replace	Air bag module
86	Remove/Replace	RT Ft impact sensor
87	Remove/Replace	LT Ft impact sensor
88	Remove/Replace	RT Side impact sens front door
89	Remove/Replace	LT Side impact sens front door
90	Remove/Replace	RT Side impact sens lock pillar
91	Remove/Replace	LT Side impact sens lock pillar
92	Remove/Replace	Clockspring 16-circuit
93	Remove/Replace	RT Seat belt assy atmosphere
94	Remove/Replace	LT Seat belt assy atmosphere
95	Remove/Replace	RT Buckle w/2 way man adj seat atmospher
96	Remove/Replace	LT Buckle w/2 way man adj seat atmospher
97	Remove/Replace	RT Tensioner atmosphere
98	Remove/Replace	LT Tensioner atmosphere
99	Remove/Replace	Air bag system diagnosis
100		SEATS & TRACKS
101	Remove/Install	RT R&I front seat
102	Remove/Install	LT R&I front seat
103	Remove/Install	R&I rear seat as an assy
104	Remove/Replace	Seat back cover w/leather atmosphere
105	Remove/Replace	Seat back pad
106	Remove/Replace	Seat back heater
107	Remove/Replace	Seat back frame
108		ROOF
109	Remove/Replace	Roof panel
109	Remove/Replace	Roof panel
110		Overlap Major Adj. Panel
111		Add for Clear Coat
112	Remove/Install	R&I headliner
113	Remove/Install	RT Sunvisor w/light atmosphere
114	Remove/Install	LT Sunvisor w/light atmosphere
115		PILLARS, ROCKER & FLOOR
116	Repair, Partial	RT Uniside assy w/o RS pkg quarter panel
116	Repair, Partial	RT Uniside assy w/o RS pkg quarter panel
117		Deduct for Rear Bumper R&I
118		Overlap Major Adj. Panel
119		Add for Clear Coat
120		Deduct for Back Glass R&I
121	Blank	Fabricate Sleeves/Backing Plates
122	Blank	Weld-Thru Primer
123	Blank	Panel Bonding Adhesive
124	Blank	Flexible Foam
125	Remove/Replace	LT Uniside assy w/o RS pkg
125	Remove/Replace	LT Uniside assy w/o RS pkg
126		Overlap Major Adj. Panel
127		Add for Clear Coat
128		Deduct for Back Glass R&I
129	Remove/Install	RT Pillar molding anthracite

130	Remove/Replace	LT Pillar molding anthracite
131	Remove/Install	RT Rocker molding
132	Remove/Install	LT Rocker molding
133	Remove/Install	RT W/S pillar trim atmosphere
134	Remove/Install	LT W/S pillar trim atmosphere
135	Remove/Install	RT Center plr trim atmosphere
136	Remove/Install	LT Center plr trim atmosphere
137	Remove/Install	RT Front sill plate atmosphere
138	Remove/Install	LT Front sill plate atmosphere
139	Remove/Install	RT Rear sill plate atmosphere
140	Remove/Install	LT Rear sill plate atmosphere
141		FRONT DOOR
142	Blend	RT Outer panel
143	Remove/Replace	LT Door shell
143	Remove/Replace	LT Door shell
144		Overlap Major Adj. Panel
145		Add for Clear Coat
146	Remove/Install	LT W'strip on body
147	Remove/Install	RT Belt molding bright finish
148	Remove/Install	LT Belt molding bright finish
149	Remove/Install	LT Applique black
150	Remove/Install	LT Reveal molding
151	Remove/Install	RT R&I mirror
152	Remove/Replace	LT Mirror assy w/heat, w/o lamp, w/o obs
153	Remove/Replace	LT Mirror cover paint to match
153	Remove/Replace	LT Mirror cover paint to match
154		Overlap Minor Panel
155		Add for Clear Coat
156	Remove/Replace	LT Door glass GM
157	Remove/Install	LT Run w'strip bright finish
158	Remove/Install	RT Handle, outside w/o passive entry
159	Remove/Install	LT Handle, outside w/o passive entry
160	Remove/Install	LT Lock cylinder
161	Remove/Install	LT Latch w/o passive entry US built
162	Remove/Install	LT Door check
163	Remove/Install	RT R&I trim panel
164	Remove/Install	LT R&I trim panel
165		REAR DOOR
166	Remove/Install	RT R&I door assy
167	Blend	RT Outer panel
168	Remove/Replace	LT Door shell
168	Remove/Replace	LT Door shell
169		Overlap Major Adj. Panel
170		Add for Clear Coat
171	Remove/Install	RT W'strip on body
172	Remove/Install	LT W'strip on body
173	Remove/Install	RT Belt molding bright finish
174	Remove/Install	LT Belt molding bright finish
175	Remove/Install	LT Applique black
176	Remove/Install	LT Reveal molding
177	Remove/Install	LT Moveable glass GM
178	Remove/Replace	LT Run w'strip black
179	Remove/Install	LT Window regulator
180	Remove/Install	RT Handle, outside w/o passive entry
181	Remove/Install	LT Handle, outside w/o passive entry
182	Remove/Install	LT Latch US built
183	Remove/Install	LT Door check
184	Remove/Install	RT R&I trim panel
185	Remove/Install	LT R&I trim panel
186		BACK GLASS
187	Remove/Install	Back glass GM

188	Blank	Urethane Glass Installation Kit
189	Blank	Adhesive Removal
190		QUARTER PANEL
191	Remove/Replace	RT Lower panel
191	Remove/Replace	RT Lower panel
192		Add for Clear Coat
193	Remove/Replace	LT Lower panel
193	Remove/Replace	LT Lower panel
194		Add for Clear Coat
195	Remove/Replace	RT Tail lamp pocket
195	Remove/Replace	RT Tail lamp pocket
196		Add for Clear Coat
197		Deduct for Overlap
198	Remove/Replace	LT Tail lamp pocket
198	Remove/Replace	LT Tail lamp pocket
199		Add for Clear Coat
200		Deduct for Overlap
201	Remove/Install	Fuel pocket 1.4 liter
202	Remove/Install	Fuel door
203	Blend	Fuel door
204	Remove/Replace	RT Wheelhouse liner
205	Remove/Replace	LT Wheelhouse liner
206	Remove/Replace	RT Pressure valve
207	Remove/Replace	LT Pressure valve
208	Remove/Install	RT Applique black/chrome
209	Remove/Install	LT Applique black/chrome
210	Remove/Install	RT Upper qtr trim atmosphere
211	Remove/Install	LT Upper qtr trim atmosphere
212		FUEL SYSTEM
213	Remove/Install	R&I fuel tank
214		REAR BODY & FLOOR
215	Remove/Replace	Rear body panel
215	Remove/Replace	Rear body panel
216		Overlap Major Non-Adj. Panel
217		Add for Clear Coat
218		Add for Inside
219		Add for Clear Coat
220		Deduct for Overlap
221		Deduct for Overlap
222	Remove/Replace	Rear floor pan
222	Remove/Replace	Rear floor pan
223	Blank	Sound Deadener (per pad)
224	Repair	RT Outer rail (UHS)
224	Repair	RT Outer rail (UHS)
225		Overlap Major Non-Adj. Panel
226	Remove/Install	Pkg tray trim w/o premium sound atmosphe
227	Remove/Replace	RT Trunk side trim US built
228	Remove/Install	LT Trunk side trim US built
229	Remove/Replace	Rear sill plate
230	Remove/Install	RT Panel support
231	Remove/Install	LT Panel support
232	Remove/Install	Floor cover w/o tire inflator
233	Remove/Install	Underbody shield w/o RS pkg
234		TRUNK LID
235	Remove/Replace	Trunk lid w/o spoiler
235	Remove/Replace	Trunk lid w/o spoiler
236		Overlap Major Adj. Panel
237		Add for Clear Coat
238		Add for Underside(Complete)
239		Add for Clear Coat
240	Remove/Replace	RT Hinge

240	Remove/Replace	RT Hinge
241		Overlap Minor Panel
242	Remove/Replace	LT Hinge
242	Remove/Replace	LT Hinge
243		Overlap Minor Panel
244	Remove/Replace	Latch
245	Remove/Replace	Latch cover
246	Remove/Replace	Striker
247	Remove/Replace	Body w'strip
248	Remove/Install	Harness w/o park assist
249	Remove/Replace	Emblem w/o RS package
250	Remove/Replace	Nameplate "CRUZE" w/o code CG6
251	Remove/Replace	Nameplate "PREMIER"
252	Remove/Install	Trunk lid trim
253		REAR LAMPS
254	Remove/Replace	RT Tail lamp assy w/o LED tail lamps 1st
255	Remove/Replace	LT Tail lamp assy w/o LED tail lamps 1st
256	Remove/Install	RT Backup lamp assy w/o LED lamps 1st de
257	Remove/Replace	LT Backup lamp assy w/o LED lamps 1st de
258	Remove/Install	License lamp
259		REAR BUMPER
260	Overhaul	O/H bumper assy
261	Remove/Replace	Bumper cover w/o obstacle detection
261	Remove/Replace	Bumper cover w/o obstacle detection
262		Overlap Major Non-Adj. Panel
263		Add for Clear Coat
264		Deduct for Rear Bumper R&I
265	Remove/Replace	RT Side support
266	Remove/Replace	LT Side support
267	Remove/Replace	RT Side support rivet
268	Remove/Replace	LT Side support rivet
269	Remove/Replace	RT Lower bracket
270	Remove/Replace	RT Lower bracket rivet
271	Remove/Replace	Center support
272	Remove/Replace	Center support rivet
273	Remove/Replace	Impact bar
274	Remove/Replace	Absorber
275	Remove/Replace	RT Reflector
276	Remove/Replace	LT Reflector
277		MISCELLANEOUS OPERATIONS
278	Repair	Bench Set Up and Measure Vehicle
279	Alignment	Pull and Square Unibody/Frame
280	Repair	Pinch Welds
280	Repair	Pinch Welds
281	Sublet	Four Wheel Alignment
282	Sublet	Hazardous Waste Removal
283	Blank	Flex Additive (per panel)
284	Blank	Car Cover
285	Remove/Replace	Corrosion Protection
286	Remove/Replace	Seam Sealer
287	Remove/Replace	Rustproofing/Cavity Wax
288	Blank	Mask Interior
289	Blank	Mask Jambs
290	Blank	De-Nib and Polish
291	Blank	Clean Up Broken Glass
292	Blank	Touch Up Bolt Heads
293	Blank	Clean for Delivery

