

Year	18	Make	TOYO	Model	Corolla LE w/Continuously Variable Transmission
BodyStyle	4D SED	Color		VIN	2T1BURHE8JC054896
Engine	4-1.8L Gasoline Sequ	Type	Car	Odometer	15368
Production Date		Primary Point Of Impact14			
License	KPW8547	Secondary Point Of Impact14			
License State	PA				

**Line Items**

Line	Operation	Description
1		INFORMATION LABELS
2		Rpl information labels
3	Remove/Replace	Emission label w/o valvematic eng.
4	Remove/Replace	AC label
5	Remove/Replace	Fan label
6		FRONT BUMPER
7	Remove/Replace	Prep unprimed bumper
8	Remove/Replace	Bumper cover screw # 1
9	Remove/Replace	RT Side retainer
10	Overhaul	O/H bumper assy
11	Remove/Replace	Bumper cover
11	Remove/Replace	Bumper cover
12	Remove/Replace	Bumper cover grommet
13	Remove/Replace	Bumper cover screw # 2
14	Remove/Replace	RT Hole cover w/o bumper DRL
15	Remove/Replace	LT Side retainer
16	Remove/Replace	Bumper cover retainer inner # 1

17	Remove/Replace	Bumper cover retainer inner # 2
18	Remove/Replace	Bumper cover retainer outer
19	Remove/Replace	LT Hole cover w/o bumper DRL
20	Remove/Replace	Absorber
21	Remove/Replace	LT Hole cover screw
22		GRILLE
23	Remove/Replace	Upper grille
23	Remove/Replace	Upper grille
24	Remove/Replace	Emblem
25	Remove/Replace	Lower grille
26	Remove/Replace	Distance sensor
27	Remove/Replace	Lower grille retainer
28		FRONT LAMPS
29	Remove/Replace	RT Headlamp assy w/o DRL
30		Aim headlamps
31	Remove/Replace	LT Headlamp assy w/o DRL
32		RADIATOR SUPPORT
33		Refinish Components
34		Overlap Minor Panel
35	Remove/Replace	Radiator support
35	Remove/Replace	Radiator support
36		Evacuate & recharge
37		Refrigerant recovery
38		Add for auto trans
39	Remove/Replace	Center support
40	Remove/Replace	LT Air deflector
41	Remove/Replace	RT Air deflector
42	Remove/Replace	RT Under cover auto trans
43	Remove/Replace	LT Under cover auto trans
44	Remove/Replace	Cover assy
45		COOLING
46	Remove/Replace	Radiator assy all
47	Remove/Replace	RT Radiator assy upper support
48	Remove/Replace	LT Radiator assy upper support
49	Remove/Replace	RT Radiator assy cushion
50	Remove/Replace	LT Radiator assy cushion
51	Remove/Replace	Upper hose
52		Deduct for Overlap
53	Remove/Replace	Upper panel
54	Remove/Replace	Cooling shroud
55	Remove/Replace	Fan blade
56		AIR CONDITIONER & HEATER
57	Remove/Replace	Condenser OEM
58		HOOD
59	Remove/Replace	Hood (HSS)
59	Remove/Replace	Hood (HSS)
60		Overlap Major Non-Adj. Panel
61		Add for Underside(Complete)
62	Remove/Replace	Front seal
63	Remove/Replace	RT Hinge
63	Remove/Replace	RT Hinge
64	Remove/Replace	LT Hinge
64	Remove/Replace	LT Hinge
65	Remove/Replace	Latch assy w/keyless entry
66		FENDER
67	Remove/Replace	RT Fender
67	Remove/Replace	RT Fender
68		Overlap Major Adj. Panel
69		Add for Edging
70	Remove/Replace	LT Fender
70	Remove/Replace	LT Fender

71		Overlap Major Adj. Panel
72		Add for Edging
73	Remove/Replace	RT Fender guide
74	Remove/Replace	LT Fender guide
75	Remove/Replace	RT Fender liner
76	Remove/Replace	LT Fender liner
77	Remove/Replace	LT Fender liner retainer
78	Remove/Replace	RT Fender liner retainer
79	Remove/Replace	LT Apron assy (HSS)
79	Remove/Replace	LT Apron assy (HSS)
80		Overlap Major Non-Adj. Panel
81		Deduct for Overlap
82	Remove/Replace	LT Outer rail
83	Repair	LT Rail assy all
83	Repair	LT Rail assy all
84		Overlap Major Non-Adj. Panel
85	Remove/Replace	LT Rail extrn
85	Remove/Replace	LT Rail extrn
86		ELECTRICAL
87	Remove/Replace	Battery
88	Remove/Replace	Fuse & relay box
89	Remove/Replace	Hold down
90	Remove/Replace	Battery tray
91	Remove/Replace	Engine harness w/o valvematic eng, w/aut
92	Remove/Replace	Upper cover
93	Remove/Replace	Lower cover
94		ENGINE / TRANSAXLE
95	Remove/Replace	Engine cover w/o valvematic eng.
96		WINDSHIELD
97	Repair	Windshield Toyota w/o lane assist
98		PILLARS, ROCKER & FLOOR
99	Blend	RT Hinge pillar (HSS)
100	Blend	LT Hinge pillar (HSS)
101		FRONT DOOR
102	Remove/Install	RT Belt molding
103	Blend	RT Outer panel (HSS)
104	Repair	LT Outer panel (HSS)
104	Repair	LT Outer panel (HSS)
105		Overlap Major Adj. Panel
106	Blank	DEDUCT FOR BLEND
107	Remove/Install	LT Belt molding
108	Remove/Install	RT Mirror assy w/heated glass, w/o turn
109	Remove/Install	LT Mirror assy w/heated glass, w/o turn
110	Remove/Install	RT Handle, outside w/o Smart Key black
111	Remove/Install	LT Handle, outside w/o Smart Key black
112	Remove/Install	RT R&I trim panel
113	Remove/Install	LT R&I trim panel
114		REAR BUMPER
115	Remove/Replace	Prep unprimed bumper
116	Remove/Replace	FLEX AGENT
117	Repair	SETUP MOUNT & MEASURE
118	Remove/Replace	CAR COVER
119	Overhaul	O/H bumper assy
120	Remove/Replace	Bumper cover
120	Remove/Replace	Bumper cover
121		Overlap Major Non-Adj. Panel
122		Clear Coat
123	Repair	UNIBODY ALIGNMENT
124	Remove/Replace	CORROSION PROTECTION
125	Remove/Replace	MASK JAMBS & HINGES
126	Repair	RESET ELECTRONIC COMPONENTS

12/12/2018

127	Sublet	HAZ. WASTE REMOVAL
128	Remove/Replace	ENGINE COOLANT / GALLON
129	Remove/Replace	FREON R134 / LB
130	Blank	ALIGNMENT
131	Repair	WIRING