

Line	Ver	Operation	Description	Qty	Extended Price \$	Part Type	Labor	Type	Paint
1	E01		FRONT BUMPER						
2	E01	Remove/Replace	O/H front bumper				3.3	Body	
3	E01	Remove/Replace	Bumper cover	1	660.00T	OEM	0.0	Body	3.2
4	E01		Add for Clear Coat						1.3
5	E01	Remove/Replace	Lower grille w/o adaptive cruise	1	86.95T	OEM	0.0	Body	
6	E01	Remove/Replace	Lower support	1	137.00T	OEM	0.0	Body	
7	E01	Remove/Replace	Energy absorber	1	91.70T	OEM	0.0	Body	
8	E01	Remove/Replace	Impact bar	1	307.00T	OEM	0.7	Body	
9	E01	Remove/Replace	RT Support inner	1	27.00T	OEM	0.0	Body	
10	E01	Remove/Replace	LT Support inner	1	27.00T	OEM	0.0	Body	
11	E01	Remove/Replace	Filler panel	1	66.60T	OEM	0.0	Body	
12	E01	Remove/Replace	Bezel	1	30.25T	OEM	0.0	Body	
13	E01	Remove/Replace	Cover support	1	160.00T	OEM	0.0	Body	
14	E01	Remove/Replace	LT Bumper bracket	1	27.20T	OEM	0.1	Body	
15	E01	Remove/Replace	RT Bumper bracket	1	27.20T	OEM	0.1	Body	
16	E01		FENDER						
17	E01	Remove/Replace	RT Fender	1	300.00T	OEM	1.6	Body	2.0
18	E01		Add for Clear Coat						0.8
19	E01		Add for Edging						0.5
20	E01		Add for Clear Coat						0.1
21	E01	Remove/Replace	LT Fender	1	300.00T	OEM	1.6	Body	2.0
22	E01		Overlap Major Adj. Panel						(0.4)
23	E01		Add for Clear Coat						0.3

24	E01		Add for Edging		
25	E01		Add for Clear Coat		
26	E01	Remove/Replace	RT Fender liner 3.6L, 5.7L	1	1
27	E01	Remove/Replace	LT Fender liner 3.6L, 5.7L	1	1
28	E01	Remove/Replace	RT Fender liner retainer	1	
29	E01	Remove/Replace	LT Fender liner retainer	1	
30	E01	Remove/Replace	RT Insulator	1	
31	E01		ROOF		
32	E01	Remove/Replace	Roof panel w/o sunroof	1	8
33	E01		Overlap Major Adj. Panel		
34	E01		Add for Clear Coat		
35	E01		QUARTER PANEL		
36	E01	Remove/Replace	RT Quarter panel	1	9
37	E01		Overlap Major Adj. Panel		
38	E01		Add for Clear Coat		
39	E01	Remove/Replace	Deduct for Back Glass R&I		
40	E01	Remove/Replace	LT Quarter panel	1	8
41	E01		Overlap Major Adj. Panel		
42	E01		Add for Clear Coat		
43	E01	Remove/Replace	Deduct for Rear Bumper R&I		
44	E01	Remove/Replace	Deduct for Back Glass R&I		
45	E01		PILLARS, ROCKER & FLOOR		
46	E01	Remove/Replace	RT Aperture panel	1	6
47	E01		Overlap Major Adj. Panel		
48	E01		Add for Clear Coat		
49	E01	Remove/Replace	Deduct for Overlap		
50	E01	Remove/Replace	LT Aperture panel	1	6
51	E01		Overlap Major Adj. Panel		
52	E01		Add for Clear Coat		
53	E01	Remove/Replace	Deduct for Overlap		
54	E01		FRONT DOOR		
55	E01	Remove/Replace	RT Door shell (HSS)	1	8
56	E01		Overlap Major Adj. Panel		
57	E01		Add for Clear Coat		
58	E01	Remove/Replace	LT Door shell (HSS)	1	8
59	E01		Overlap Major Adj. Panel		
60	E01		Add for Clear Coat		
61	E01	Remove/Replace	RT Power mirror w/heat, w/o memory, w/o blind spot blue	1	2
62	E01		Overlap Minor Panel		
63	E01		Add for Clear Coat		
64	E01	Remove/Replace	LT Power mirror w/heat, w/o memory, w/o blind spot blue	1	1

65	E01		Overlap Minor Panel	
66	E01		Add for Clear Coat	
67	E01		REAR DOOR	
68	E01	Remove/Replace	RT Door shell (HSS)	1
69	E01		Overlap Major Adj. Panel	
70	E01		Add for Clear Coat	
71	E01	Remove/Replace	LT Door shell (HSS)	1
72	E01		Overlap Major Adj. Panel	
73	E01		Add for Clear Coat	
74	E01		RESTRAINT SYSTEMS	
75	E01	Remove/Replace	Psngr air bag	1
76	E01	Remove/Replace	RT Ft seat air bag	1
77	E01	Remove/Replace	Air bag system diagnosis	
78	E01	Remove/Replace	LT Ft seat air bag	1
79	E01	Remove/Replace	Knee air bag	1
80	E01	Remove/Replace	Knee air bag	1
81	E01	Remove/Replace	RT Head air bag	1
82	E01	Remove/Replace	LT Head air bag	1
83	E01	Remove/Replace	Control module w/o police 3.6L, 5.7L	1
84	E01	Remove/Replace	RT Position sensor	1
85	E01	Remove/Replace	RT Side impact sens B-pillar	1
86	E01	Remove/Replace	LT Side impact sens B-pillar	1
87	E01	Remove/Replace	RT Ft seat air bag	1
88	E01	Remove/Replace	Driver air bag w/o SRT logo	1
89	E01	Remove/Replace	Clockspring	
90	E01		FRONT LAMPS	
91	E01	Remove/Replace	RT Headlamp assy w/o HID	1
92	E01	Remove/Replace	Aim headlamps	
93	E01	Remove/Replace	LT Headlamp assy w/o HID	1
94	E01		HOOD	
95	E01	Remove/Replace	Hood (ALU)	1
96	E01		Overlap Major Adj. Panel	
97	E01		Add for Clear Coat	
98	E01		Add for Underside(Complete)	
99	E01		Add for Clear Coat	
100	E01		REAR BUMPER	
101	E01	Repair	Bumper cover w/o rev sensor	
102	E01		Add for Clear Coat	
103	E01	Remove/Install	R&I bumper cover	

